

Attention!

Remove both of the X/Y and Z shipping brackets before use.

Remove the handle behind Y-axis motor after machine is placed on pedestal before use.

This is a crush hazard.





