

ATTENTION:

DO NOT ATTEMPT TO MOVE THE STAGES UNTIL THE RED SHIPPING STAGE LOCKS ARE REMOVED. TWO (2) RED STAGE LOCKS ARE INSTALLED FOR SHIPPING ONE (1) ON EACH AXIS. REMOVE THE STAGE LOCKS AND REINSTALL TWO (2) RETAINING SCREWS WITHOUT THE STAGE LOCKS ON THE X AND Y AXIS.

ONCE THE MACHINE IS IN PLACE AND THE LIFTING BARS HAVE BEEN REMOVED, INSERT THE 4 CAPS SECURELY INTO EACH HOLE.







